

SZITI-L Kábel TV csatorna kiosztás (2020.04.01.)

Sor-szám	Műsor Neve	1TV csomag	2 TV csomag		3TV csomag		Analog frekvencia	Digitális frekvencia (DVB-C)
		analog	analog	DVB-C	Analog	DVB-C		
1.	M1 (HD)	+	+	+	+	+	S9 (161,25 MHz)	S24 (330 MHz)
2.	M2 (HD)	+	+	+	+	+	S10 (168,25 MHz)	S24 (330 MHz)
3.	Duna TV (HD)	+	+	+	+	+	E5 (175,25MHz)	S24 (330 MHz)
4.	M4 (HD)	+	+	+	+	+	E6 (182,25MHz)	S24 (330 MHz)
5.	Duna World	+	+	+	+	+	E7 (189,25MHz)	S24 (330 MHz)
6.	RTL Klub (HD)	+	+	+	+	+	E8 (196,25MHz)	S27 (354 MHz)
7.	TV 2 (HD)	+	+	+	+	+	E9 (203,25 MHz)	S27 (354 MHz)
8.	Bonum TV	+	+	+	+	+	E10 (210,25 MHz)	S24 (330 MHz)
9.	Debr. TV (B.keresztesen nincs)	+	+	+	+	+	E11 (217,25 MHz)	S27 (354 MHz)
9.	TVR1 (csak B.keresztesen)	+	+	+	+	+	E11 (217,25 MHz)	S27 (354 MHz)
10.	Helyi TV (csak B.keresztes)	+	+	+	+	+	E12 (224,25 MHz)	S27 (354 MHz)
11.	ATV Spirit		+	+	+	+	S11 (231,25 MHz)	S26 (346 MHz)
12.	Super TV2		+	+	+	+	S12 (238,25 MHz)	S26 (346 MHz)
13.	TV 4		+	+	+	+	S13 (245,25 MHz)	S26 (346 MHz)
14.	DIGI Life		+	+	+	+	S14 (252,25 MHz)	S26 (346 MHz)
15.	PAX TV		+	+	+	+	S15 (259,25 MHz)	S26 (346 MHz)
16.	DIGI Sport1 (HD)		+	+	+	+	S16 (266,25 MHz)	S25 (338 MHz)
17.	DIGI Sport2 (HD)		+	+	+	+	S17 (273,25 MHz)	S25 (338 MHz)
18.	Muzsika TV		+	+	+	+	S18 (280,25 MHz)	S25 (338 MHz)
19.	Sorozat+		+	+	+	+	S19 (287,25 MHz)	S25 (338 MHz)
20.	COOL TV		+	+	+	+	S20 (295,25 MHz)	S26 (346 MHz)
21.	Prime		+	+	+	+	S21 (303,25 MHz)	S26 (346 MHz)
22.	Magyar ATV		+	+	+	+	S22 (311,25 MHz)	S26 (346 MHz)
23.	Hír TV		+	+	+	+	S23 (319,25 MHz)	S26 (346 MHz)
24.	Mozi+			+		+		S24 (330 MHz)
25.	Lichi			+		+		S26 (346 MHz)
26.	KIWI			+		+		S25 (338 MHz)
27.	Humor+			+		+		S25 (338 MHz)
28.	Story 4			+		+		S25 (338 MHz)
29.	Galaxy4			+		+		S25 (338 MHz)
30.	Jockey TV			+		+		S26 (346 MHz)
31.	Moziverzum			+		+		S25 (338 MHz)
32.	Nicktoons			+		+		S27 (354 MHz)
33.	RTL 2 (Csak B.keresztesen)				+	+	S36 (423,25 MHz)	S29 (370 MHz)
33.	DIGI World (HD)				+	+	S37 (431,25 MHz)	S29 (370 MHz)
34.	Viasat History (HD)				+	+	S38 (439,25MHz)	S30 (378 MHz)
35.	Viasat Explore (HD)				+	+	S39 (447,25MHz)	S30 (378 MHz)
36.	RTL 2 (B. keresztesen nem)				+	+	S40 (455,25 MHz)	S29 (370 MHz)
37.	Film4				+	+	S41 (463,25 MHz)	S29 (370 MHz)
38.	FEM3				+	+	CH21 (471,25 MHz)	S29 (370 MHz)
39.	Viasat3				+	+	CH22 (479,25 MHz)	S29 (370 MHz)
40.	AXN				+	+	CH23 (487,25 MHz)	S29 (370 MHz)
41.	HIT Music				+	+	CH24 (495,25 MHz)	S29 (370 MHz)
42.	Sony Movie				+	+	CH25 (503,25 MHz)	S29 (370 MHz)
43.	DIGI Animal World				+	+	CH26 (511,25MHz)	S30 (378 MHz)
44.	FilmCafé				+	+	CH27 (519,25 MHz)	S31 (386 MHz)
45.	Paramount				+	+	CH28 (527,25 MHz)	S29 (370 MHz)
46.	Comedy Central				+	+	CH29 (535,25 MHz)	S29 (370 MHz)
47.	Film+				+	+	CH30 (543,25 MHz)	S30 (378 MHz)
48.	Viasat6				+	+	CH31 (551,25 MHz)	S30 (378 MHz)
49.	Sony Max				+	+	CH32 (559,25 MHz)	S31 (386 MHz)
50.	Nickelodeon				+	+	CH33 (567,25 MHz)	S31 (386 MHz)
51.	Ozone TV				+	+	CH34 (575,25MHz)	S30 (378 MHz)
52.	Filmbox				+	+	CH35 (583,25 MHz)	S30 (378 MHz)
53.	M5			+	+	+	CH36 (591,25 MHz)	S26 (346 MHz)
54.	National Geogrephic				+	+	CH37 (599,25 MHz)	S30 (378 MHz)
55.	DIGI Sport3					+		S30 (378 MHz)
56.	RTL Spike					+		S30 (378 MHz)
57.	Life TV					+		S30 (378 MHz)
58.	Zenebutik					+		S31 (386 MHz)
59.	Izaura					+		S31 (386 MHz)
60.	Epic Drama (HD)					+		S31 (386 MHz)
61.	MTV Hungary					+		S31 (386 MHz)
62.	Nickelodeon Junior					+		S31 (386 MHz)
63.	Viasat Nature (HD)					+		S31 (386 MHz)
64.	Comedy Central Family					+		S31 (386 MHz)
65.	Spíler1					+		S29 (370 MHz)
66.	Spíler2					+		S31 (386 MHz)
	Kossuth, Petőfi, Bartók, Dankó r.			+		+		S24 (330 MHz)